

iConnect™ Media Keyboard & Wireless Laser Mouse.
Model IH-K237LB

Product Knowledge Base



Note: iPod/iPhone compatibility

iPhone 3G – 8GB, 16GB
iPod touch 2nd generation – 8GB, 16GB, 32GB
iPod nano 4th generation (video) - 8GB, 16GB
iPod classic – 120GB
iPod touch 1st generation - 8GB, 16GB, 32GB
iPod nano 3rd generation (video) – 4GB, 8GB
iPod classic – 80GB, 160GB
iPod nano 2nd generation (aluminium) – 2GB, 4GB, 8GB
iPod 5th generation (video) – 30GB
iPod nano 1st generation – 1GB, 2GB, 4GB

device	use insert
iPod nano (1 st , 2 nd , 3 rd and 4 th generation)	1
iPod classic (80GB, 120GB) iPod 5G (30 GB) iPod touch, 1 st and 2 nd generation (8GB, 16GB, 32GB)	2
iPhone 3G iPod classic (160GB) iPod 5G (60GB, 80GB)	3

Frequently Asked Questions (FAQs)

1. What is included in the box?

- iConnect media keyboard (USB)
- Wireless laser mouse
- USB nano receiver
- 1 Duracell battery
- Inserts for iPod and iPhone (3)
- AC adapter
- Installation CD
- User manual
- Quick start guide

2. What are the system requirements?

PC

- Windows XP, Vista or Windows 7
- USB Port
- CD-ROM drive

3. What are the Features?

Keyboard

- charge-n-sync iPod or iPhone® with iTunes®
- illuminated touch-sensitive media keys
- 2 rotating USB 2.0 ports
- rubberized wrist rest

Mouse

- plug-n-play, no syncing needed
- 2.4 GHz, connect at up to 20 feet
- high-resolution laser sensor
- programmable buttons
- horizontal & vertical scrolling
- low battery indicator
- cursor speed button
- stowable nano USB receiver

4. How to Connect the Keyboard?

Note: Connect the AC Adapter first.

- Connect the USB cable to the USB port of the computer and the power connector to the AC wall outlet and start using the keyboard.

 
Warning: AC Adapter must be connected all the time when using the keyboard.

5. Where can I find warranty information?

Visit www.life-works.com/warranty

6. How to install mouse software?

- Insert installation CD into your computer's CD-ROM drive. The installation software automatically launches.

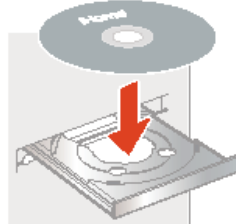

- click **install**



- click **next** on **InstallShield Wizard** dialog
- Click **next** on **Choose Destination Location** dialog to accept default installation location.
- **Restart** computer when prompted. When the computer restarts, a mouse icon displays in the system tray.

 


7. How to customize the mouse buttons?

- Double-click **mouse icon**. A dialog box will open.



- select **Config of mouse button** tab. computer
- Click drop-down list to select action for each button.

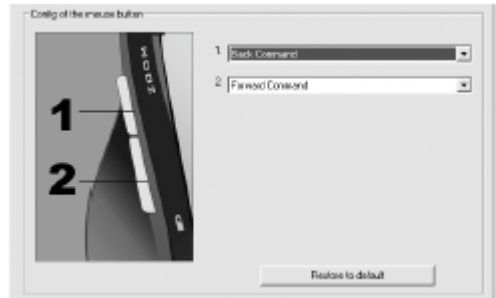


- click **OK** to accept changes and exit

8. How to customize mouse scroll wheel?


- Double-click **mouse icon** in system tray.



 - Select **Config of the mouse wheel** tab.

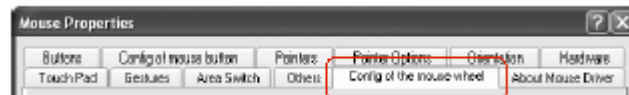

 - Select **Speed of wheel scroll** tab.
Choose how many lines should scroll when the wheel is rotated one click, or select **For Pages** to scroll a whole page with each click. To set the mouse wheel to adjust the audio volume, select **Adjust of the volume**, and drag the slider to set how fast the volume changes when you turn the wheel.

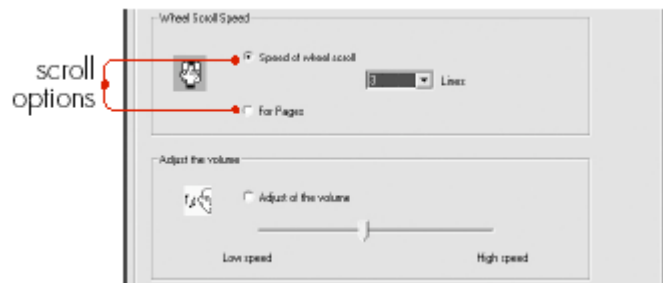

- **OK** to accept changes and exit

9. How to dock your iPod or iPhone?


- Gently slide the dock cover forward. insert your iPod or iPhone
- For a snug fit, use one of the three inserts before docking your iPod or iPhone.

10. How to use the keyboard?

Adjust the volume from the keyboard

- Slide finger across volume control to adjust volume—left to lower, right to increase.



Note: To go from minimum to maximum volume or back again, swipe four times.

Press the  key the special function key for the desired action.

special function keys

function key	function
F2	 My Computer
F3	 My Favorites
F4	 home
F5	 search
F11	 wake
F12	 sleep

media keys

media key	function
	shuffle
	repeat
	previous track (hold for rewind)
	next track (hold for fast forward)
	mute
	eject iPod or iPhone


11. How to use your mouse?

 
Horizontal and vertical scroll

- Roll the wheel up and down to scroll vertically.
- Tilt the wheel left or right to scroll horizontally.



Auto scroll

- The scroll wheel is also a button. Press the scroll wheel (without rolling it) and the mouse pointer on the screen will change to . Move your mouse up/down or left/right to set the scroll speed (the more you move the mouse the faster the page will scroll the document or web page). Click the wheel button again to turn off auto scroll.
- mouse cursor speed
- Your mouse has two sensitivity settings: standard mode and high-performance mode. High performance mode allows the cursor to move very quickly and is useful for activities such as gaming. Press the DPI button to switch from standard mode to high-performance mode and back.

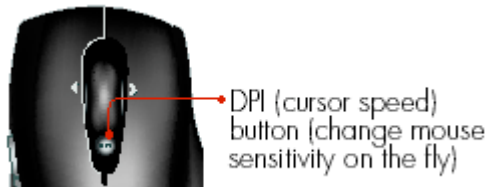

Troubleshooting

1. iPhone/iPod does not charge or sync?

- Ensure AC adapter is connected
- Ensure USB cable is connected
- Ensure device is seated separately
- Ensure iTunes is open

2. Keyboard or USB 2.0 ports do not work?

- Ensure USB cable is connected
- Connect your keyboard to the port on your computer, not to the USB hub
- Ensure AC adapter is connected

3. Mouse does not work?

- Ensure the USB nano receiver is connected.
- Connect the nano USB receiver to a different USB port.
- Check that the battery is inserted correctly.
- Move the mouse closer to the USB nano receiver.
- Ensure the laser sensor on the bottom of the mouse is clean.
- Install a fresh battery.

Product operating tips

Warning: keyboard must be connected to AC adapter at all times when in use. Your keyboard is designed to sync and charge your iPod or iPhone when docked

- If you want to use your ipod or iphone, gently slide the dock cover forward and then insert your iPod or iPhone.
- For a snug fit, use one of the three inserts before docking your iPod or iphone. (see compatibility on page 2).
- Please see your get started guide for instructions on how to use the special function keys.
- Your mouse will operate from as far as 20ft. (7m) from your computer.
- To save battery power turn off battery when not in use.
- Store the nano USB receiver under the battery cover for travel or when not in use.

Technical Support

For questions regarding your iHome computer accessory, please visit our website at www.life-works.com or call **1-877-Life-540/ 1-877-543-3540**.
2009 © LifeWorks Technology Group LLC.

iHome™ is a trademark of SDI Technologies Inc. used under license.

Windows Vista® is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

All other brands and logos are trademarks of their respective companies.