

iStand Notebook Media Center With Built-in Speakers

Model # IH-A710SB

Product Knowledge Base



Note: iPod/iPhone compatibility

iPhone 3G – 8GB, 16GB
iPod touch 2nd generation – 8GB, 16GB, 32GB
iPod nano 4th generation (video) - 8GB, 16GB
iPod classic – 120GB
iPod touch 1st generation - 8GB, 16GB, 32GB
iPod nano 3rd generation (video) – 4GB, 8GB
iPod classic – 80GB, 160GB
iPod nano 2nd generation (aluminium) – 2GB, 4GB, 8GB
iPod 5th generation (video) – 30GB
iPod nano 1st generation – 1GB, 2GB, 4GB

device	use insert
iPod nano (1 st , 2 nd , 3 rd and 4 th generation)	1
iPod classic (80GB, 120GB) iPod 5G (30 GB) iPod touch, 1 st and 2 nd generation (8GB, 16GB, 32GB)	2
iPhone 3G iPod classic (160GB) iPod 5G (60GB, 80GB)	3

Frequently Asked Questions (FAQs)

1. What is included in the box?

- iStand notebook media center with built-in speakers.
- inserts for iPod and iPhone (3).
- USB cable.
- AC adapter.
- User manual.
- Quick start guide

2. What are the system requirements?

- Notebook size limits: 13 to 15.5 in.
- Maximum notebook weight: 8 lbs.

PC

- Windows XP or Vista
- USB port

Mac

- OS X 10.5 or later
- USB port

3. Where can I find warranty information?

Visit www.life-works.com/warranty

4. How to connect the iStand notebook media center?

- Connect USB cable and AC adapter to base.
- Plug Ac adapter into power source.

Note : Stand must be connected to the AC adapter at all times when in use.

- Adjust angle on notebook stand.

Note : Press the button on the stand, then rotate the notebook holder to the desired position.

- Insert notebook into the stand.
- Insert USB cable from stand to notebook.
- Press power button.
- Dock your iPod or iPhone

Note : Your iStand notebook media center is designed to play, sync and charge your iPod or iPhone with iTunes®.

 
To play content on your iPod or iPhone directly through the high performance speakers, “eject” your iPod or iPhone from iTunes, then control content directly from the docked device.

5. What are the features?


- charge-n-sync iPod® or iPhone® with iTunes®
- touch-sensitive volume control
- high-performance speakers•
- 2 high-speed USB 2.0 ports
- 3 adjustable positions•
- fits all 13” to 15.5” notebooks

6. How to use the iStand media center?

- Change notebook stand angle
- Press and hold angle adjustment button.

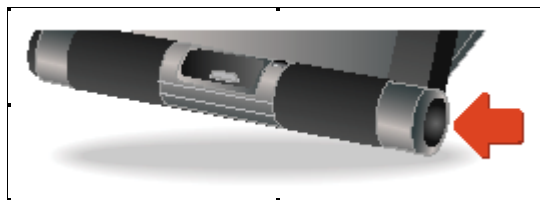


 - Rotate stand, you can change the angle to one of 3 positions: 15, 30, 45 degrees.

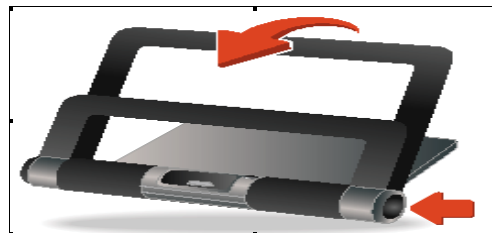

- Release adjustment button to lock stand into place.

 - Place notebook into stand.

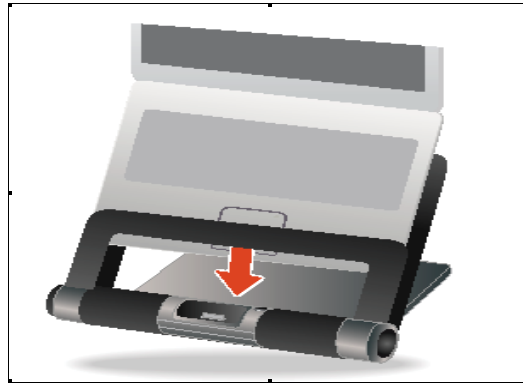


- **WARNING: Stand must be connected to the AC adapter at all the times when in use.**

ok

7. How to Dock your iPhone or iPod?

 Position insert (See compatibility chart below)

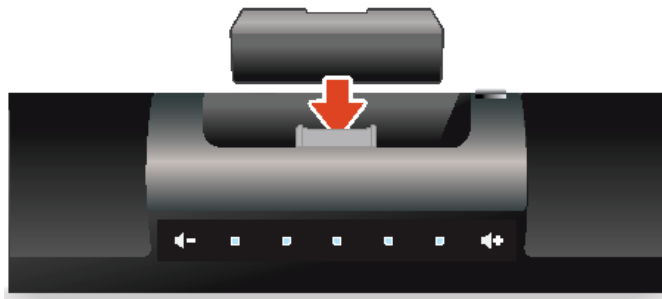

Dock iPod or iPhone




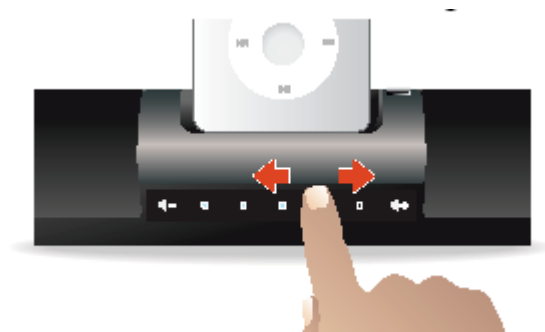 
Press power button



Note : For snug fit, use one of the three inserts before docking your iPod or iPhone.

8. How to play audio from iPod or iPhone?

- Place iPod or iPhone in dock.
- Turn on the notebook stand power.
- From itunes click the  icon to eject iPod or iPhone.
- Use controls on iPod or iPhone to select and play audio through notebook stand speakers. Slide your finger across the touch-sensitive illuminated volume control to adjust the volume---left to lower, right to increase.



- To go from minimum to maximum volume or back again, swipe twice.

Note: You can also use the stand to play content from your iPod or iPhone when your notebook is not connected.

Troubleshooting Steps

1. iPod or iPhone does not charge?

- Ensure AC adapter is connected.
- Ensure the iPod or iPhone is seated correctly.

2. iPod or iPhone does not Sync?

- Ensure AC adapter is connected.
- Ensure USB cable is connected to stand and notebook.
- Ensure notebook stand power is on.
- Ensure the iPod or iPhone is seated correctly.
- Ensure the iTunes is open.

3. iPod or iPhone does not play?

- Ensure notebook stand power is on.
- Ensure the iPod or iPhone is seated correctly.
- Ensure AC adapter is connected.
- Eject iPod or iPhone from iTunes.

4. USB ports do not work?

- Ensure USB cable is connected.
- Ensure AC adapter is connected.

Product operating Tips

- **Always connect the supplied AC adapter when using the iStand notebook media center.**
- **Always remove the notebook from the stand before adjusting the angle.**
- You can play music from iPod or iPhone without a computer.
- Use one of the included inserts to make your iPod or iPhone fit securely in the dock.

Technical Support

For questions regarding your iHome computer accessory, please visit our website at www.life-works.com or call 1-877-Life-540.

2009 © LifeWorks Technology Group LLC.

iHome™ is a trademark of SDI Technologies Inc. used under license.

Windows Vista® is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

Mac® is a trademark of Apple Inc., registered in the U.S. and other countries. All other brands and logos are trademarks of their respective companies.